SASSOON

FOR MEN

I-TRIM STUBBLE+

Model VS7855A

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:
Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER: When the unit is used in a bathroom, unplug after use since the proximity of water presents a hazard even when the unit is switched off.

WARNING: Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water.

- Do not immerse in water or other liquids
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Take care to avoid contact between the moving blades of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

- **IMPORTANT:** Always unplug the appliance when not in use or before cleaning. Do not leave unattended when plugged in or switched on. Do not place on any heat sensitive surface and always wallow to cool before storing away.
- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.

- Do not use the appliance with damaged or broken attachment combs or with any teeth missing from the blades, as injury may occur.
- Use this appliance only for its intended use as described in this instruction booklet.
- This appliance is not intended for commercial use.
- Never drop or insert any object into an opening.
- Ensure appliance is switched off before plugging into the power outlet.
- Do not place appliance on any surface while it is operating.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Keep the cord away from heated surfaces.
- Do not use this appliance if the supply cord is damaged. In the event of damage, discontinue use immediately and contact your dealer for instructions on returning it for examination or exchange.
- After use do not wrap the cord around the appliance, as in time this may cause the cord to fracture. Coil cord loosely by the side of the appliance in storage.
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
- This appliance contains Nickel Metal-Hydrate (Ni-Mh) batteries. To protect the environment, the appliance should be disposed of safely and not in household waste at the end of its useful life. Do not attempt to remove the batteries from the appliance.

I-TRIM STUBBLE+
AUTOMATIC ALL-IN-ONE DC MOTOR FACIAL TRIMMER

Thank you for purchasing the VS For Men i-trim stubble+, an automatic all-in-one DC motor facial trimmer that provides everyday designer stubble control.
Featuring 74 precision cutting length settings from 0.4mm to 15mm in exact 0.2mm increments, the i-trim stubble+ is ideal for creating a short, shadow stubble look, a longer designer stubble look or maintaining a full beard.
The i-trim stubble+ delivers VS For Men's best cutting performance by combining premium 'Hard Like Diamond' (HLD) carbon coated stainless steel blades with titanium and a high performance professional DC motor to provide high precision control for all types of cutting and trimming.
This trimmer is primarily designed for trimming and maintaining facial hair, however it is also suitable for trimming unwanted body hair.

FEATURES

1. Innovative motorised comb guide system with up and down button selections
2. 1 integrated comb guide attachment for 74 precision cutting lengths (0.4mm to 15mm) in exact 0.2mm increments
3. 1 unique stubble comb guide attachment for maximum precision and length control when trimming around the sideburns and contours of the neck
4. Trimmer blades - 'Hard Like Diamond' (HLD) carbon coated stainless steel blades with Titanium
5. On/Off button
6. LCD display shows:
7. Selected cutting length in mm
8. Battery life remaining
9. AC power adaptor

ACCESSORIES

10. Cleaning brush
11. Beard and moustache comb
12. Lubricating oil
13. Storage pouch

4
2
MOTORISED
5
6
1
15.0
mm
3
11
13
9
12
10

INSTRUCTIONS FOR USE

- A plastic cover has been placed over the adaptor plug to protect it from damage. Remove the plastic cover before inserting into a suitable power outlet.
- Always inspect the i-trim stubble+ before use to ensure the cutting head is free from hair and debris and is running smoothly.

CHARGING THE TRIMMER (FOR CORDLESS OPERATION)

IMPORTANT: Before using the appliance for the first time, charge for a full 16 hour continuous charge. Maximum battery capacity will only be reached after 3 charging and discharging cycles. After 3 cycles, the trimmer has a 90 minute charge and 30 minute run time plus the 5 minute quick charge and 3 minute run time.

To charge the appliance, place the adaptor charging cord directly into the base of the trimmer.

1. Plug the AC power adaptor into a 100V - 240V power supply.
2. When the appliance is switched off, plug the charging cord directly into the base of the trimmer.
3. Switch the adaptor on. The LCD display will then illuminate and the charging indicator bar will appear in the LCD display. Always check that the charging indicator illuminates when you have the charging cord plugged in and the adaptor switched on.
4. The LCD backlight will always stay illuminated and the charging indicator bar in the LCD display will always be flashing when the product is charging. When the product is fully charged, the charging indicator bar will be solid and no longer flashing - this indicates that a full charge has been reached.
5. A full charge will supply enough power for minimum 30 minutes use. The remaining battery life is shown in the LCD display. The 5 minute quick charge function will provide 3 minutes use. .

CORDED USE – OPERATION WITH POWER CORD

1. Plug the AC power adaptor directly into the base of the trimmer.
2. Plug the AC power adaptor into a 100V – 240V power supply. Switch the power supply on, and the trimmer can now be used in corded operation.

NOTE: If battery power is weak, wait about 2 minutes before pressing on/off button.

74 Motorised Cutting Length Settings (0.4mm to 15mm)

The innovative i-trim stubble+ uses an integrated cutting guide with 74 ultra precise control settings eliminating the need for changing and storing different attachment combs. The cutting guide is motorised for easy one touch adjustment and features an LCD display for confirmation of the length setting selected. When you select your required length, the length setting will then remain displayed on the LCD screen.

1. Use the cutting length setting buttons on the trimmer to adjust the motorised comb guide.
2. Press the power On to activate the trimmer motor.
3. Press the up or down arrow buttons to select length settings in 0.2mm increments from 0.4mm through to 15mm (NB – the trimmer will stop while the comb guide is being adjusted).

STARTING AND USING YOUR I-TRIM STUBBLE+

1. Press the on/off button to activate the trimmer.
2. Press the up or down arrow buttons to adjust and set the cutting/ trimming length. Pressing one of these buttons will stop the trimmer motor. It is always suggested to start cutting with a longer length first, then trim again if the length is longer than desired.
3. Hold the trimmer against the hair, the teeth of the comb guide should be pointing upwards and should be flat against the face. If the comb guide is not flat against the face, you may not get an even cut. The protective comb guide should help to avoid uneven cuts, by providing direction and helping you to hold the trimmer flat against the face.

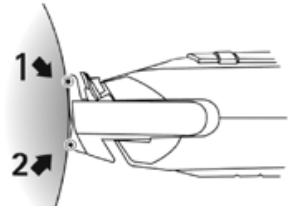

4. Move the trimmer upwards through the hair, a little at a time, with and against the direction of hair growth, whichever is most comfortable, as most men have hair growing in various directions.
5. The i-trim stubble+ will work most effectively when cutting through the hair at its own speed – never force the trimmer. You may experience a little resistance around the moustache area, where hair is thicker and grows in many different directions. This is completely normal.
6. Never switch the trimmer off whilst in the hair.
7. To turn the trimmer off:

Either: Press and hold the On/Off button for more than 2 seconds, the unit will shut down completely and the cutting guide comb will return to its original position;

Or press the On/Off for less than 2 seconds, only the motor will turn off, the display will remain lit for 15 seconds. After 15 seconds you will still have 5 minutes to change the cutting length.

After 5 minutes, the trimmer turns itself off and the cutting guide comb will return to its original position next time you activate the trimmer.

USING THE COMB GUIDE

Your i-trim stubble+ comes assembled with the motorised comb guide already installed. The comb guide allows you to change the cutting length of your trimmer with ease. You'll need to experiment to find your preferred length, but as a guide, 0.4mm will give you ultra close short, shadow stubble effect, whilst 2mm will give you a longer designer stubble look, 3.4mm will give you a longer, more rugged look, 5mm will give you a short beard and 8mm+ will give you a full bearded look.

IMPORTANT: Always remove and attach the comb guide BEFORE turning the trimmer on.

To remove the comb guide, first adjust the cutting length on the trimmer to the longest length setting (15mm). Switch the product off and then pull the comb guide upwards to remove.
(NB – When using the trimmer without the comb guide attachment, the cutting length will be below 0.4mm. The length setting shown on the LCD display will no longer be relevant when the comb guide is removed).

To attach the comb guide, line up the long sides of the comb guide (arms) with the sides of the i-trim stubble+. The teeth of the comb guide should be facing forwards. Push the comb guide down onto the trimmer until it 'clicks' into place. This should then secure the comb guide into place.

USING THE UNIQUE STUBBLE COMB GUIDE ATTACHMENT

Your i-trim stubble+ comes assembled with the stubble comb guide already attached to the standard comb guide. This comb guide helps to provide maximum precision and length control when trimming around the sideburns and contours of the neck.

The i-trim stubble+ can be used with or without the stubble comb guide attachment, whichever is more comfortable for you to use.

IMPORTANT: Always remove and attach the comb guide BEFORE turning the trimmer on.

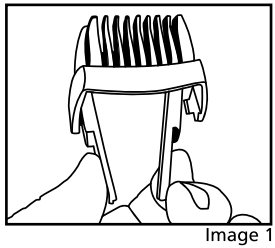

Image 1

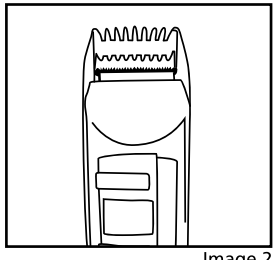

Image 2

To remove the stubble comb guide attachment, first remove the standard comb guide by adjusting the cutting length on the trimmer to the longest length setting (15mm). Switch the product off and then pull the comb guide upwards to remove. When the standard comb guide has been removed from the trimmer, using one hand, slightly push the arms of the standard comb guide together (Image 1). One side of the stubble comb guide should then come away from the standard comb guide. Using the other free hand, simply un-click the other side of the stubble comb guide and pull it away to separate the two comb guide attachments. The standard comb guide can now be re-attached to the trimmer (Image 2).

To attach the stubble comb guide attachment, take the stubble comb guide and line it up with the standard comb guide. The teeth of both comb guides should be facing forwards. Ensure that when attaching the stubble comb guide to the standard comb guide, that the curved long edge of the standard comb guide is facing

the back.
Using one hand, slightly push the arms of the standard comb guide together. Take the stubble comb guide and line the two inserts up with the two lugs on either side of the standard comb guide. Simply hold the stubble comb guide in place and then release the pressure from the standard comb guide. The two comb guides should now be connected (Image 3).

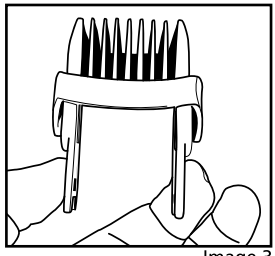
Image 3

Push the standard comb guide down onto the trimmer until it 'clicks' into place. This should then secure the comb guide into place.

HOW TO CREATE DIFFERENT LOOKS USING THE I-TRIM STUBBLE+

A popular and most recent trend in men's grooming is the designer stubble look – a well groomed light hint of facial hair. The designer stubble look is a rugged way to add interest to a man's face without sporting a full beard – it can help make a man's face look romantic, sophisticated, cool rugged or even refined, depending on which way you wear it. It is one of the lasting hints of facial hair trends that works for so many different men.

Maintaining a designer stubble look requires regular grooming with the i-trim stubble+, to ensure that you don't get a patchy or uneven appearance. It is recommended to trim/shave every couple of days to keep your shadow effect from sprouting into a full beard. The key to staying trimmed is to pay attention to how fast your facial hair grows. The faster you can grow a beard, the quicker you'll need to keep up with your stubble to ensure it stays shaped – designer stubble is an ongoing process of upkeep, so you can't just shape it and leave it.

NB - Use on clean, dry hair. If possible, when using for the first time, try and grow your facial hair for at least 4 days before cutting. This will give you a better result, as your facial hair will feel thicker.

To create a short, shadow stubble look:

1. If your hair is already quite short, set the motorised comb guide to 0.4mm trimming length. If your hair is quite long, thick and coarse, pre-trim the hair using a longer length setting, such as 8mm, then once all of the hair has been trimmed, set the motorised comb guide to 0.4mm length.
2. For a close finish around the sideburns and cheeks, remove the comb guide (refer to 'Using the Comb Guide' for further information) and turn the i-trim stubble+ over, so that the blades are closest to the face. Trim around the sideburns and cheeks, taking care around the sideburns so that you do not trim the hair too short.

To create a longer designer stubble look (mid-length stubble):

1. If your hair is already quite short, set the motorised comb guide to 2mm trimming length. If your hair is quite long, thick and coarse, pre-trim the hair using a longer length setting, such as 8mm, then once all of the hair has been trimmed, set the motorised comb guide to 2mm length.
2. Move the trimmer upwards through the hair, a little at a time, with and against the direction of hair growth, whichever is most comfortable, as most men have hair growing in various directions.
3. The i-trim stubble+ will work most effectively when cutting through hair at its own speed – never force the trimmer. You may experience a little resistance around the moustache area, where hair is thicker and grows in many different directions. This is completely normal.

To create a longer, rugged look:

1. If your hair is already quite short, set the motorised comb guide to 3.4mm trimming length. If your hair is quite long, thick and coarse, pre-trim the hair using a longer length setting, such as 11mm, then once all of the hair has been trimmed, set the motorised comb guide to 3.4mm length.
2. Move the trimmer upwards through the hair, a little at a time,

with and against the direction of the hair growth, as most men have hair growing in various directions.

3. The i-trim stubble+ will work most effectively when cutting through hair at its own speed – never force the trimmer. You may experience a little resistance around the moustache area, where hair is thicker and grows in many different directions. This is completely normal..

To create a full beard:

1. Set the motorised comb guide to between 8mm and 13mm length.
2. Move the trimmer upwards through the hair, a little at a time, with and against the direction of hair growth, whichever is most comfortable, as most men have hair growing in various directions.
3. The i-trim stubble+ will work most effectively when cutting through the hair at its own speed – never force the trimmer. You may experience a little resistance around the moustache area, where hair is thicker and grows in many different directions. This is completely normal.

MULTI VOLTAGE

This appliance has a multi voltage feature for worldwide use. The voltage automatically converts for ease of use from 100v - 240v. This appliance has an automatic internal converter which will automatically convert the voltage without the need of a switch. A suitable plug adaptor will be required, please refer to the chart below.

Plug adaptor required	Voltage and plug adaptors	Country	Voltage setting
	British plug: 240V	Ireland, Great Britain, Singapore, South America, Hong Kong (parts only), Africa (parts only)	240V
	European plug: 240V	Asia, Europe, Middle East Noumea, Scandinavia, South America, Hong Kong (parts only)	240V
	Australian and New Zealand plug: 240V	Australia, New Zealand	240V
	American plugs: 120V	North America, Japan, Canada (parts of)	120V

CLEANING AND MAINTENANCE

To maintain optimum performance, the appliance should be cleaned after each use:

1. Switch trimmer off and remove the power supply, if connected. Remove comb cutting guide.
2. To make cleaning easier, remove the blades from the trimmer. To remove the blades, hold the handle of the trimmer with one hand and place your free hand on top of the trimmer head, with the thumb placed at the back of the blades. Place your index finger and middle at the front of the blades. Using your index and middle fingers, pull the blades backwards and click off from the trimmer. Place the blades in a secure place.
3. Use the cleaning brush supplied to brush away hair and debris.
4. Ensure that you do this after each use and before storing away.
5. When used regularly, the blades will not need to be oiled, however if the trimmer has not been used for a prolonged period of time, then it is advisable to apply a small amount of lubricating oil (provided) to the blades before using. This helps to keep the blades as sharp as possible.

BATTERY DISPOSAL

The appliance contains Nickel Metal-Hydrate batteries. To protect the environment, the appliance must be disposed of safely at the end of its useful life. Please take the appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately.

Ni-MH

For more information about the recycling of electrical and battery operated appliances, please contact your local council office or your household waste disposal service.

LIMITED THREE YEAR WARRANTY

This product is subject to the express warranty given on the warranty card included with the product, as may be amended by reference to and in accordance with the terms of the warranty cards displayed on VS For Men website www.vsformen.com.au

To make a warranty claim you must retain your proof of purchase. Further details can be found at www.vsformen.com.au and click on ‘customer service’.

Vidal Sassoon and related logos are trademarks of
The Procter & Gamble Company used under licence by Conair

CONAIR®

©2012 Conair Corporation USA

Conair Australia Pty Ltd, Suites 20 & 21,
7 Narabang Way, Belrose NSW 2085.
Australia Customer Service Hotline (Australia): 1800 650 263
Customer Service e-mail: aus_info@conair.com

Conair New Zealand Limited, PO BOX 251159, Pakuranga, Auckland
1706 New Zealand
Customer Service Hotline (New Zealand): 0800 266 247